ASSEMBLY INSTRUCTION

UUST SPEAK

***** Bluetooth



Remove the cheekpads as indicated in the communicator's instruction manual.



Remove the noise protection inserts from the speakers seats.



Place the right speaker (R) in its seat after applying the adhesive round shaped velcro included in the package.



Repeat the operations performed for the right (R) speaker for positioning the left (L).

WARNING: the left speaker must be rotated of 180 ° before being placed in the seat.

ASSEMBLY INSTRUCTION

UUST SPEAK





Place the microphone base under the chinstrap in the cavity of the EPS cheekpads. Fit the microphone boom in the seat in the inner plate

WARNING: check that the triangle on the microphone is facing the mouth.



Pass the flat cable of the remote control between the neckroll's pp plate and the shell. The remote control must remain accessible outside the helmet.



House the cable that connects the right speaker to the left between the neckroll and the crownpads.



Place the USB socket between the removable cheek pads and the neckroll.

ASSEMBLY INSTRUCTION





Stick the remote control on the side of the shell verifying the correct adhesion.