

ASSEMBLY

A9235 PRO SPEAK EVO
FOR GP01



1.


Remove the cheekpads as indicated in the communicator's instruction manual.

Place the right speaker (R) in its seat after applying the adhesive round shaped Velcro included in the package



2.

Repeat the operations performed for the right (R) speaker for positioning the left (L).

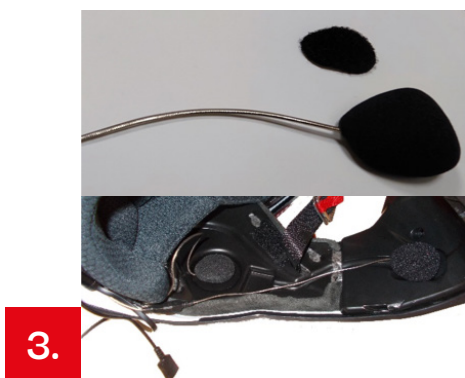

3.

Place the microphone with wire on chin cover after applying the adhesive Velcro included in the package



4.

Place the BT controller in the designated slot on the back of the inner shell

ASSEMBLY

A9235 PRO SPEAK EVO
FOR GP01



House the speaker's cable (connecting the right speaker to the left) behind the rear cushion.



Place the USB socket between the removable cheekpads and the rear cushion.



During the comfort cheekpads assembling, pass the flat cable of the remote control between the cheekpad pp plate and the shell. The remote control must remain accessible outside the helmet.



Fit the keypad on the left side (helmet on), approximately 5 mm from the lower edge of the shell using the provided adhesive. Make sure that there is full contact surface between the adhesive keypad and the outer shell.